

Note: Read these instructions thoroughly before installation to ensure proper use of the product. Dura♦Skrim® 6WW vapor retarder is typically used on the inside of the outer wall of habitable rooms to retard vapor transfer into or through the walls. Vapor retarders are not to be installed on the exterior side of an outside wall unless a design engineer has made an exception for use in hot and moist climates. The purpose of this retarder is to prevent warm, moist interior air from coming into contact with cold outside walls thus condensing to water. The presence of this condition (warm, moist air against a cold surface) inside the wall cavity can result in damage to the structure without a vapor retarder.

IN-WALL INSTRUCTIONS:

1
STEP

1.1 Dura♦Skrim® 6WW vapor retarder is to be installed on the warm side of the insulation normally sandwiched between the wood or metal studs and the interior surface such as gypsum board.

2
STEP

2.1 It is advantageous to apply a bead of polyurethane or butyl caulk around the top and bottom of the wall, around windows and doors, and on each stud in the case of metal studs. Start by installing Dura♦Skrim® 6WW vapor retarder in the upper corner of the wall and ceiling, allowing a couple of inches to be attached to the ceiling. Install by stapling the vapor retarder to the wood studs or in the case of metal studs attach with self-taping screws or pop rivets and flat fender washers. Continue to fasten along the top of the wall and ceiling approximately every two feet on each wood or metal stud. Staple every 2' on vertical wood studs and screw or pop rivet every 4' on metal studs on down to the floor. Cut out for windows, doors, electrical boxes and etc. as necessary.

3
STEP


3.1 Overlap joints at least 6" and tape them with VIAFLEX VaporBond™ tape. It is important to seal any puncture from installation prior to installing the interior surface. Polyurethane or Butyl caulk can also be used to assure a better seal in the 6" overlaps in addition to the tape.

4
STEP

4.1 When installing Dura♦Skrim® 6WW vapor retarder around electrical boxes or any other penetration, take care to seal the retarder to whatever is penetrating the Dura♦Skrim® 6WW vapor retarder. For ease of installation, install gasketed, airtight boxes, or install standard electrical boxes then caulk all openings and seal the vapor barrier to the outside box perimeter. Even the smallest gaps must be sealed or moisture can penetrate.

5
STEP

5.1 Once Dura♦Skrim® 6WW is completely installed and inspected for any openings, simply apply the interior surface.

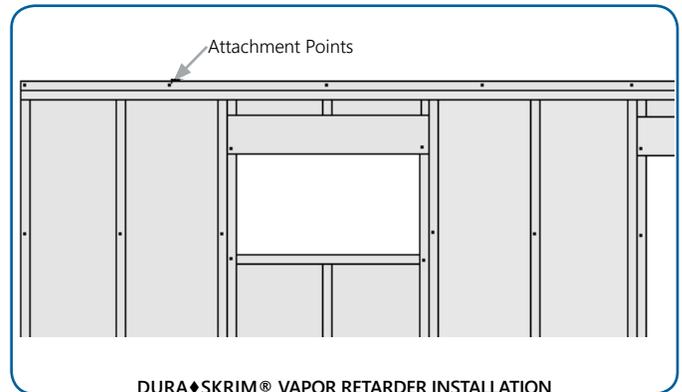

Note: To the best of our knowledge, unless otherwise stated, these are typical property values and are intended as guides only, not as specification limits. Chemical resistance, odor transmission, longevity as well as other performance criteria is not implied or given and actual testing must be performed for applicability in specific applications and/or conditions. VIAFLEX MAKES NO WARRANTIES AS TO THE FITNESS FOR A SPECIFIC USE OR MERCHANTABILITY OF PRODUCTS REFERRED TO, no guarantee of satisfactory results from reliance upon contained information or recommendations and disclaims all liability for resulting loss or damage. Limited Warranty available at www.viaflex.com

VIAFLEX, INC.

821 W Algonquin Street Sioux Falls, SD 57104
Ph: +1 (605) 335-0174 • TF: +1 (800) 635-3456
© 2022 VIAFLEX, INC. All rights reserved.

sales@viaflex.com
www.viaflex.com

Viaflex

27-0044 09/22



DURA♦SKRIM® 6WW

IN-WALL VAPOR RETARDER
INSTALLATION CHECKLIST

IN-WALL INSTALLATION CHECKLIST:

VIAFLEX, Inc. Certifies that _____ of _____ is our Certified Representative for the _____ Project involving the installation of Dura♦Skrim® 6WW in-wall vapor retarder / air barrier. Approved by VIAFLEX: _____

The purpose of this checklist is to assure that typical installation procedures have been followed. These are general procedures; Dura♦Skrim® installation Guidelines and architectural or engineering requirements must be reviewed and followed as well.

- Yes No 1. Architectural or Engineering specifications for this project have been reviewed and followed regarding any special installation procedures, as well as any local, state or federal guidelines, these supersede VIAFLEX Dura♦Skrim® installation guidelines.
- Yes No 2. Install on the proper side of the wall per the Architectural or Engineering specifications.
- Yes No 3. Verify vapor retarder is attached with staples for wood studs, or self taping screws or rivets and washers when attached to metal studs, or per architects specifications
- Yes No 4. Apply a bead of elastomeric sealant (polyurethane caulk) or other sealant as specified by the Architect around the top and bottom of the wall, around windows and doors, and on each stud in the case of metal studs.
- Yes No 5. All Joints are overlapped 6" minimum and sealed with VaporBond™ Tape or sealed per the architects specifications.
- Yes No 6. All electrical, plumbing and other penetrations have been sealed per the architect's specifications.
- Yes No 7. All holes or tears are effectively sealed with and elastomeric sealant or overlapped 6" with a piece of Dura♦Skrim® and taped around the perimeter with VaporBond™ Tape.

I have reviewed the installation of Dura♦Skrim® 6WW and have answered the questions above to the best of my knowledge.

Certified Representative: _____ Date of Review: _____

Job Name: _____ Installer / Contractor: _____

Installation Address: _____

Product installed: Dura♦Skrim® 6WW

Note: To the best of our knowledge, unless otherwise stated, these are typical property values and are intended as guides only, not as specification limits. Chemical resistance, odor transmission, longevity as well as other performance criteria is not implied or given and actual testing must be performed for applicability in specific applications and/or conditions. VIAFLEX MAKES NO WARRANTIES AS TO THE FITNESS FOR A SPECIFIC USE OR MERCHANTABILITY OF PRODUCTS REFERRED TO, no guarantee of satisfactory results from reliance upon contained information or recommendations and disclaims all liability for resulting loss or damage. Limited Warranty available at www.viaflex.com

VIAFLEX, INC.

821 W Algonquin Street Sioux Falls, SD 57104
Ph: +1 (605) 335-0174 • TF: +1 (800) 635-3456
© 2022 VIAFLEX, INC. All rights reserved.

sales@viaflex.com
www.viaflex.com

